


# BAL 40 Fire Flashings


1. Install Apollo Roofing to Engineering Specifications.
2. Install Apollo Fire Flashings to Roof Panels as shown (Max. allowable Gap <2mm).
3. Seal Apollo Fire Flashings with Soudal Soudaseal FR Grey.
4. Install Apollo Drip Edge Flashing with sealed ends and Gutter as per standard Apollo Installation Instructions.

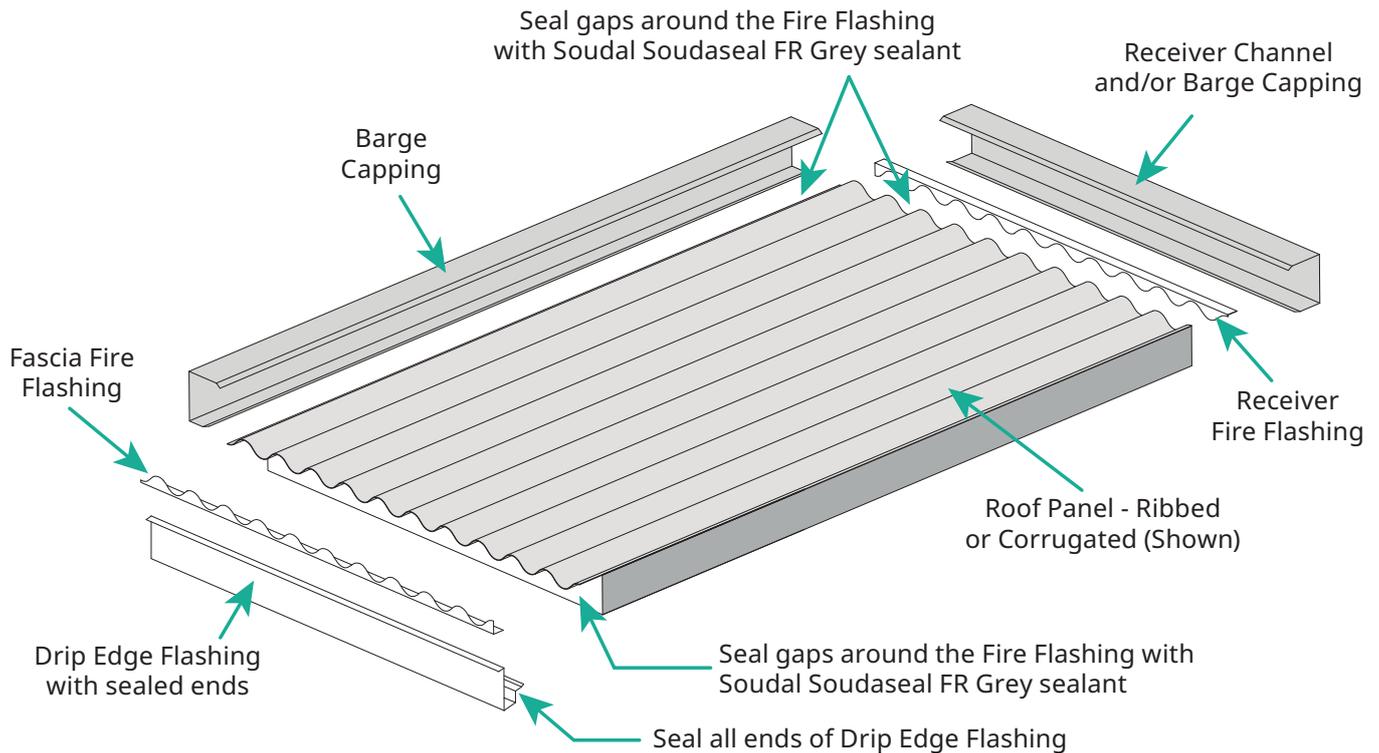

## Top View of Roof

Seal gaps around the Fire Flashing with Soudal Soudaseal FR Grey sealant

← Sealant required

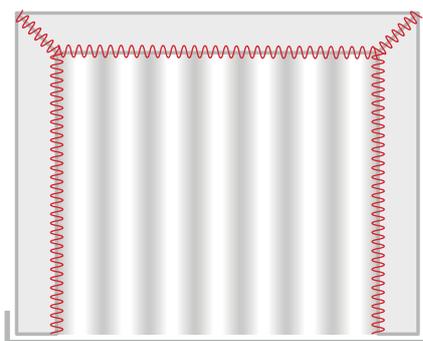

## Side View

Seal gaps around the Fire Flashing with Soudal Soudaseal FR Grey sealant

